
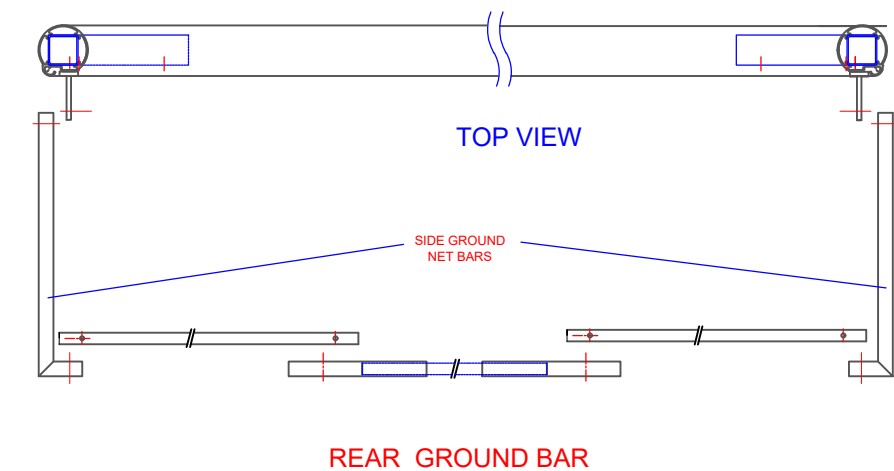
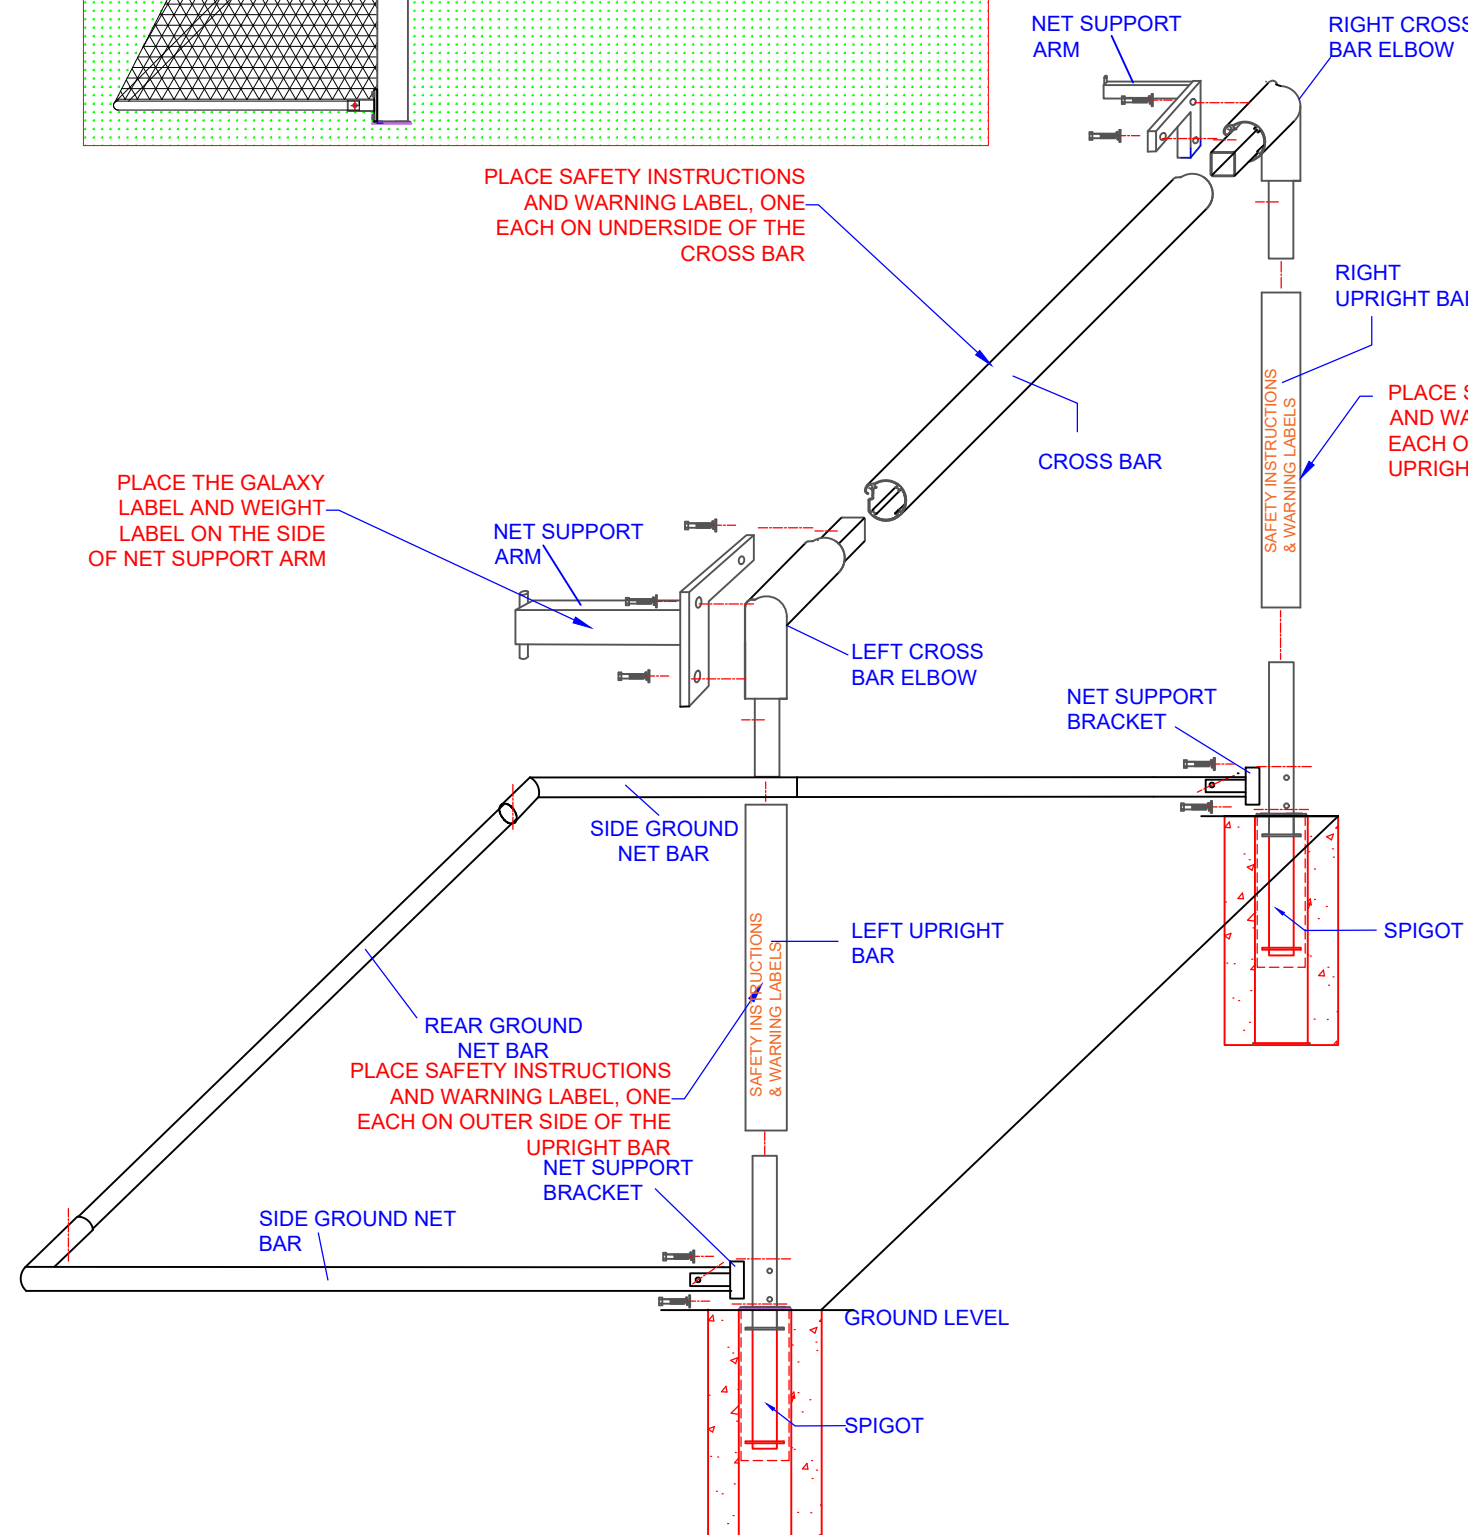
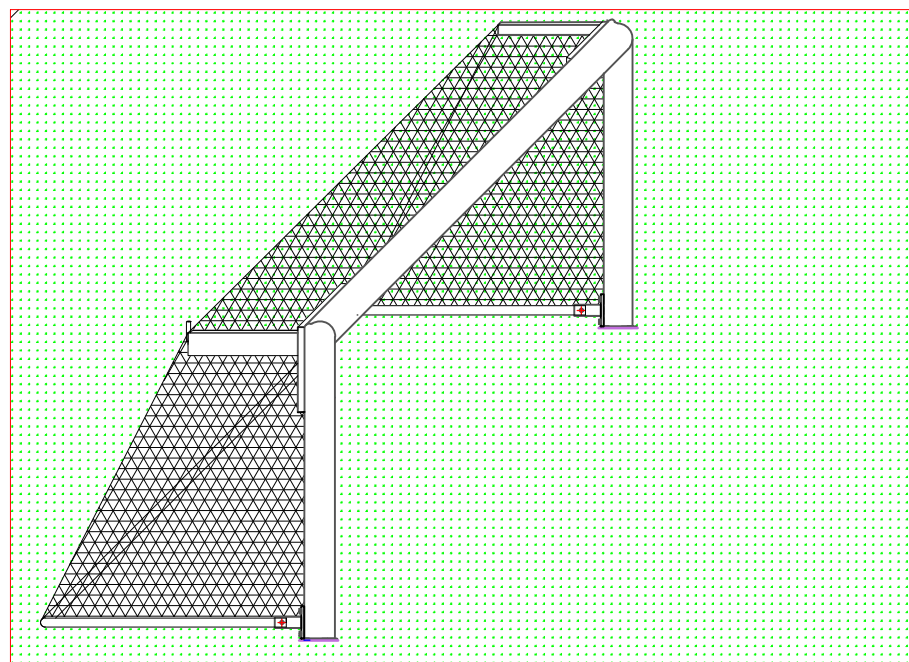


COMPONENTS
ONE PAIR of GOALS

QTY	ITEM
2	CROSS BAR
2	LEFT UPRIGHT WITH SPIGOT
2	RIGHT UPRIGHT WITH SPIGOT
2	REAR GROUND BAR
4	SIDE GROUND BAR
2	CROSS BAR ELBOW - LEFT
2	CROSS BAR ELBOW - RIGHT
2	NET SUPPORT BAR - LEFT
2	NET SUPPORT BAR - RIGHT
2	8 MM PVC TUBE 3100 MM LONG
4	8 MM PVC TUBE 2050 MM LONG
4	GROUND NET SUPPORT BAR BRACKET
24	M10 X 50 MM S/S HEX HEAD BOLT, WASHER & S/WASHER
12	M8 X 50 MM S/S HEX HEAD BOLT, WASHER & NYLOC NUT
2	NET 7.4 X 2.5 X 1.0 X 2.0 M
4	GROUND SLEEVE AND CAP
1	Each Packing, Assembly & Installation sheet

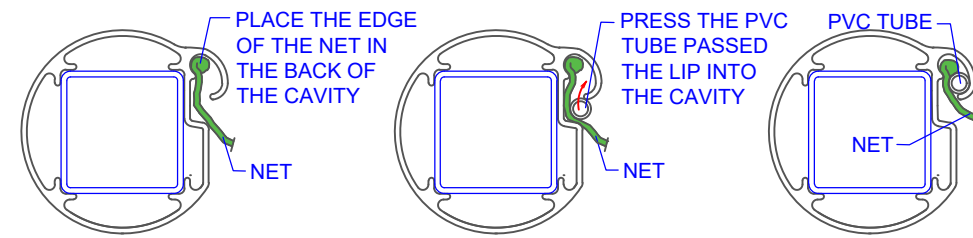

ASSEMBLY INSTRUCTIONS

1. Lay the crossbar and two elbows on the ground, with the cavity facing upwards.
2. Insert the elbows into either side of cross bar and secure them with M10 x 50 mm button head bolts, washers and spring washers.
3. Lay the uprights with spigot in line with the elbows with cavity facing upwards and secure them with M10 x 50 mm button head bolts, washers and spring washers.
4. Place the net bar brackets over the holes in the uprights and insert the M10 x 50mm button head bolts, washers and spring washers.
5. Place the net support bar over the holes in the elbows and insert the M10 x 50mm button head bolts, washers and spring washers.
6. Attach the net to the cross bar and uprights while they are lying on the ground by inserting the net edge into the profile then pressing the PVC tube under the track curve.
7. Stand the goal upright and place it into the ground sleeves.
8. Assemble the two side ground net bar and back ground net bar and secure them with M10 x 50 button head mm bolts and Nyloc nuts
9. Attach the side ground bars to the net bar brackets with M8 x 60mm button head bolts, washers and Nyloc nuts.
10. Tie the net cord to the net rail pins to reduce sag in the net.

TITLE: GALAXY 72br SOCCER GOALS (INGROUND WITH GROUND RAILS)

DRAWING NUMBER: ASSEMBLY INSTRUCTIONS



Oz Ring Pty Ltd
Trading as:
Play Hard Sports Equipment
ABN 79 066 094 559
24 Ern Harley Drive
Burleigh Heads Qld 4220
Phone: (07) 5593 4494
Fax: (07) 5593 4338
Website: www.playhardsports.com.au
Email: email@playhardsports.com.au

This Drawing Remains the property of Play Hard Sports Equipment ©